

Warranty

The P-Rail is guaranteed to be free from manufacturing defects for one (1) year from the original date of purchase.


Defective products will be repaired or replaced at Xtracycle's discretion. To determine if a warranty claim is valid you may be required to return the product to Xtracycle for inspection. Xtracycle is not responsible for removal, installation or shipping costs. This warranty applies only to the original buyer and is not transferable.

This warranty does not cover damage from use of this product outside of its intended range or that resulting from modification or neglect. It also does not cover wear and tear resulting from the normal use of the product.

XTRACYCLE

P-Rail

The easiest way to haul your panniers with you on your Xtracycle.

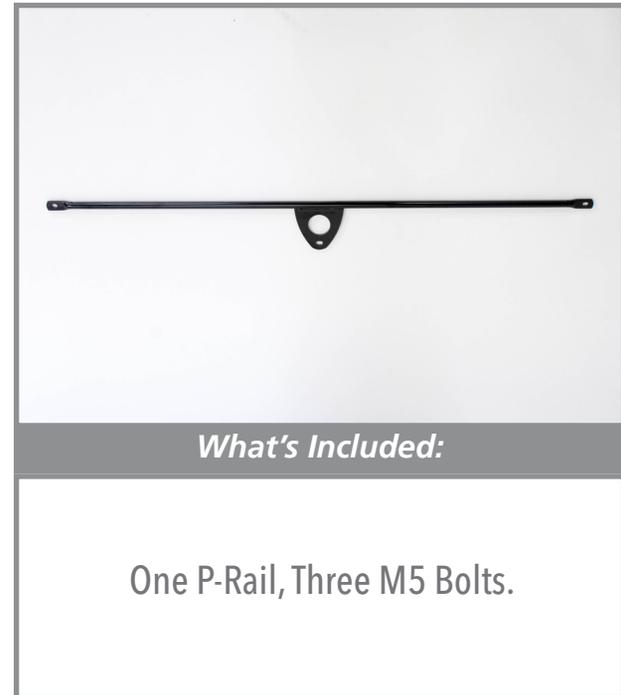

Our mission:
To empower people with transformational tools that move the body and spirit.




www.xtracycle.com



REV1

www.xtracycle.com

STEP 1:

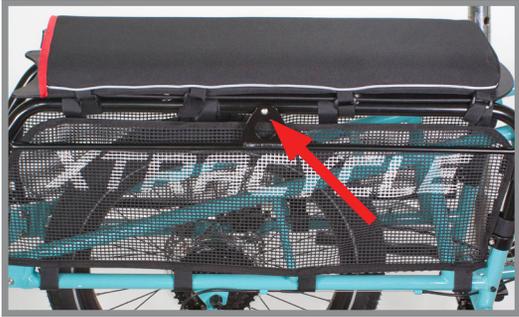

Loosely attach the center of the P-Rail to the threaded hole at the top of your Xtracycle's V-Rack, using an M5 bolt. The rail should hang so that the eyelets on the end line up with the other two mounting points on the V-Rack.

Be sure to leave enough play for the P-Rail to rotate and slide freely.



STEP 2:



Step 2a: Loosely fasten one of the eyelets to the V-Rack, using an M5 bolt. As before, leave enough play for the rack to move around.



Step 2b: Install the third M5 bolt on the other side of the rail. This time tighten it all the way, then proceed to tighten the other bolts.

Mounting your panniers:



Pannier hooks attach to the P-Rail in the same way that they mount to a traditional bike rack. This works especially well for attachments that have a safety catch built into the hook itself.

Most panniers have a secondary attachment, usually a hook or elastic strap, designed to keep them from bouncing off. Because many variations exist, some experimentation and improvisation may be necessary.

With simpler bags, a zip tie attached to the chain-stay or wheel skirt can provide a good place to attach a hook. Ortlieb style bags that use a plastic paddle to prevent flapping can often be adjusted to hook over the chainstay of EdgeRunners.

Note: If you're using a P-Rail in conjunction with U-Tubes, be sure to test the bags that you intend to use before heading out on your first ride. Some bags will hit the U-Tube, and this can interfere with mounting.