

# RFA Footpegs Installation Manual



## Included


Two (2) RFA Footpegs  
Two (2) M8 25mm bolts

## Tools needed

6mm Allen key at least 4 inches long



## Installing RFA Footpegs

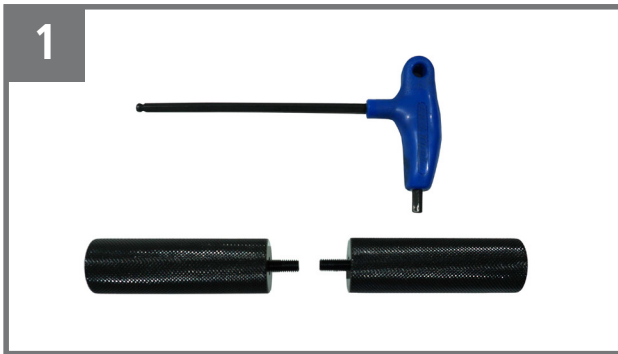

1  
Unpackage your RFA Footpegs and two M8 bolts. A handled Allen key will make installation easier.



2  
Select the forward or rear threaded mounting point on the dynamic dropout.



3  
In the forward position route the derailleur cable below the drive-side RFA Footpeg.



4  
In the rear position RFA Footpegs may be installed in conjunction with a RFA Sport Rack. The supplied 25mm bolt replaces the existing hex bolt.